


CIRCUIT FOR TWIN KENLOWE HP SERIES FANS WITH SWITCH FOR TWO SPEED 'JET BOOST' OPERATION

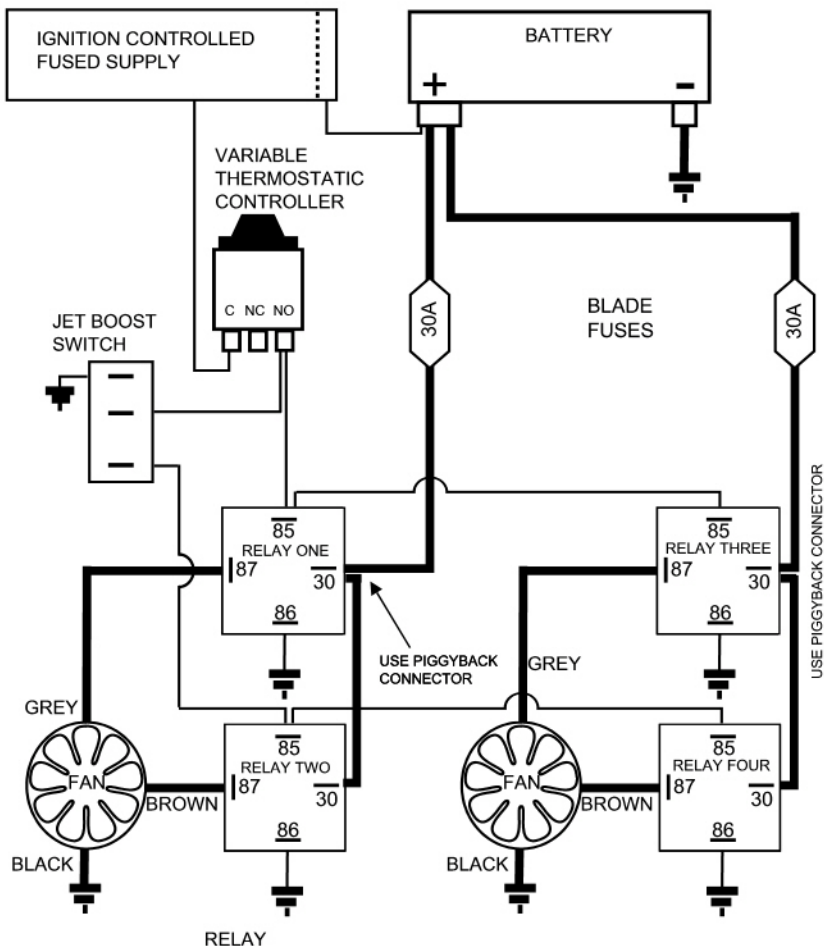

The light in the Jet Boost Switch will come on when the VTC set temperature is reached and the fans start to run. If the light does not go out after several minutes at standard power, switch in the jet boost for extra cooling.

If Jet Boost Switch not required, link terminal NO directly to pin 85 on relay two. Fans will always run at maximum speed.

KLF1362